


# HYDROPONIC TOWER

## Assembly Guide

### What's in the box?

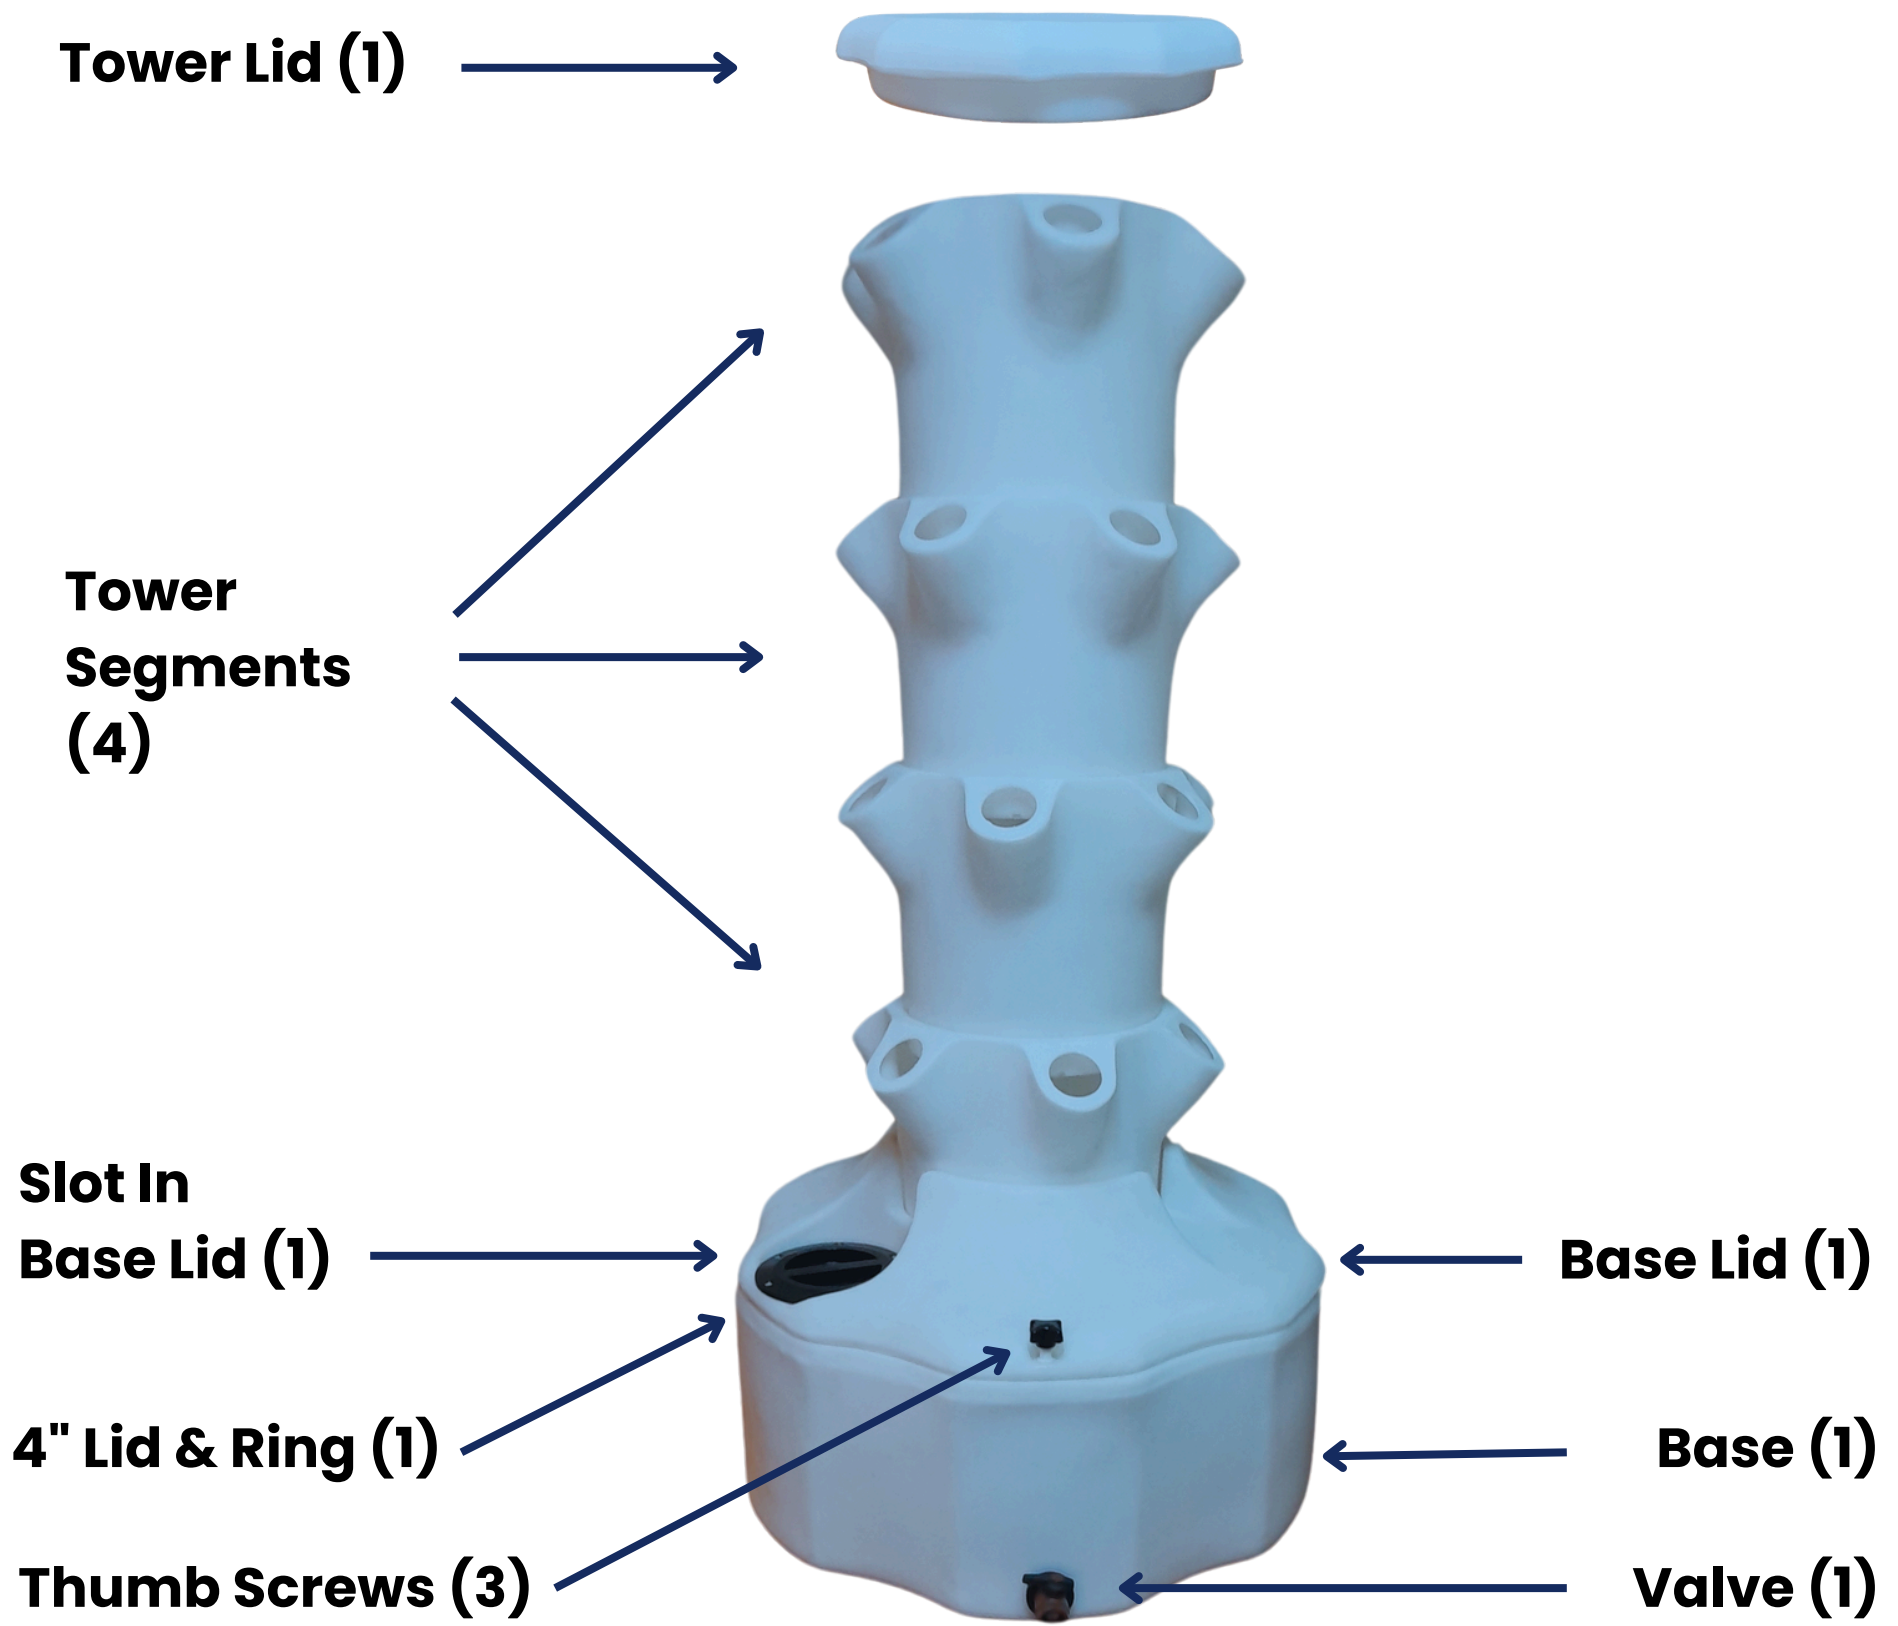

Water hose with fitting (1)



Timer (1)



Pump & Fittings (1)



Rockwool (24)



Pots (24)



# HYDROPONIC TOWER

Let's get started!

## Step 1: Assembling the hose


**1.1** Insert the end of the hose with no fitting attached, through the central opening at the top of the tower.

**Note:** Laying the tower on its side may make this process easier.

**1.2** Carefully guide the pipe through each tower segment, ensuring that the locating slots align as you feed the pipe downward.

**1.3** Ensure all stacked components are properly aligned, with no misalignment or gaps, and verify that the water pipe remains unobstructed for optimal water flow.

**Note:** Having an extra set of hands may be helpful during this step.

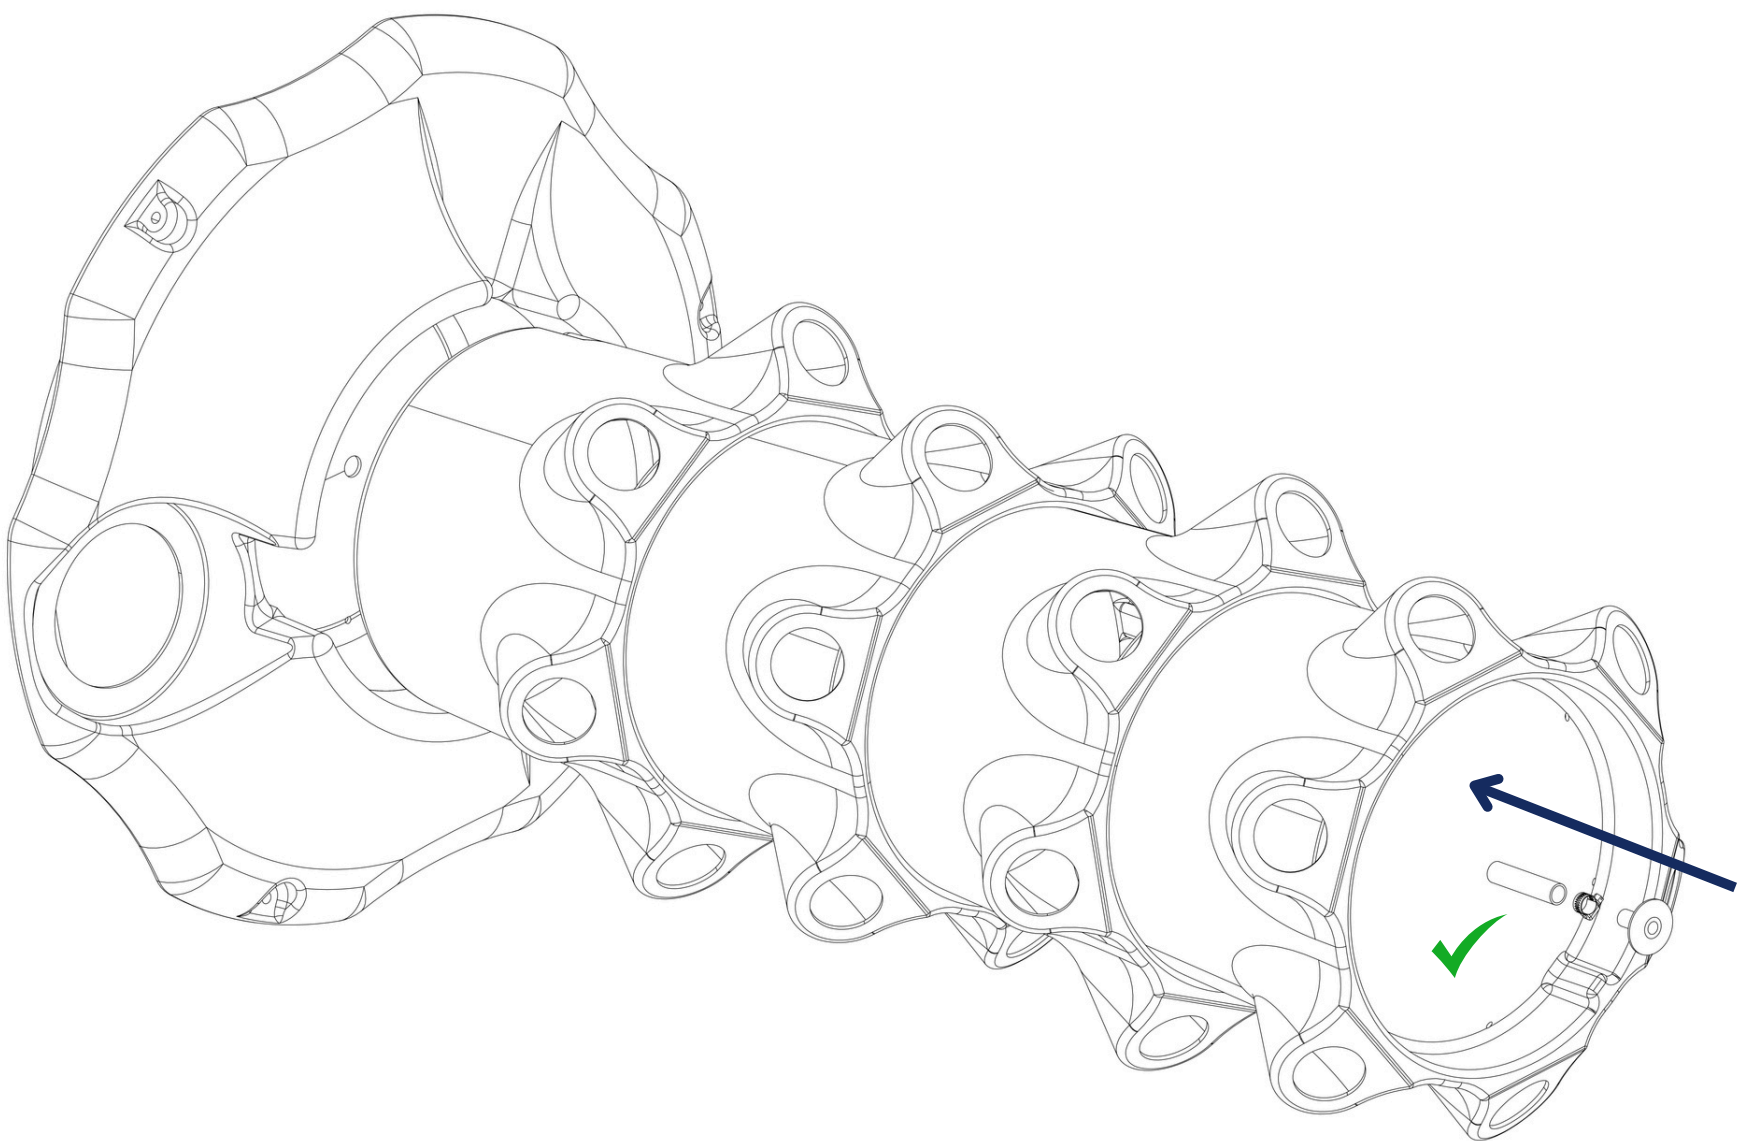

# HYDROPONIC TOWER

## Step 2: Connecting the water pump


- 2.1** Securely attach the bottom end of the hose to the outlet of the water pump.
- 2.2** Ensure the connection is secure to prevent leaks and maintain proper water circulation.
- 2.3** Position the water pump inside the base, in an upright position.

## Step 3: Connecting the electrical cord

- 3.1** Guide the cord from the water pump through the designated slot in the base lid, ensuring a smooth passage.
- 3.2** Check that the cable is free from twists or kinks and can reach a power outlet for easy connection.

## Step 4: Securing the base lid

- 4.1** Align the base lid with the base, ensuring all three fastener holes are properly aligned for a secure fit. Use the provided fasteners to securely attach the base lid to the base.

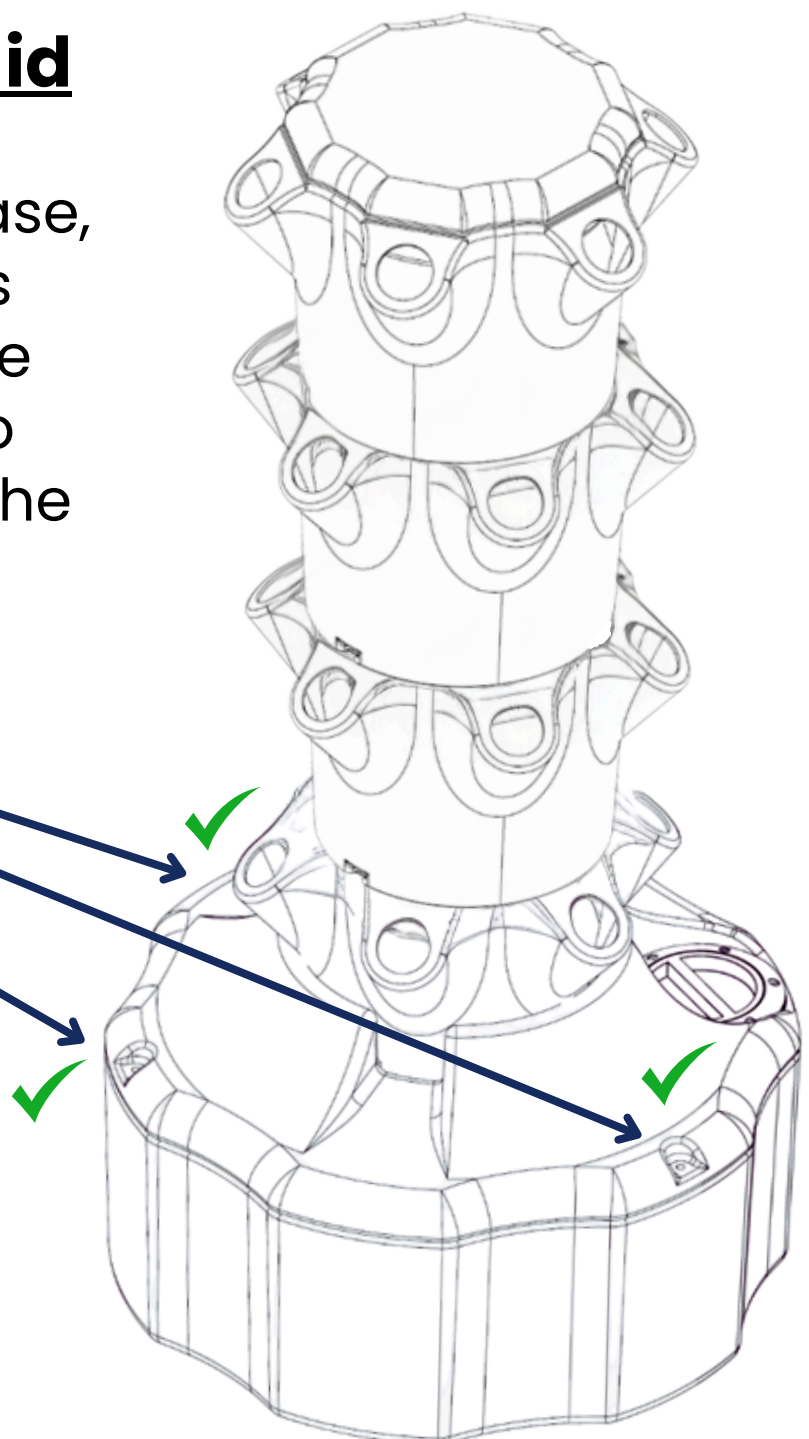

# HYDROPONIC TOWER

## Step 5: Filling the base with water

**5.1** Carefully fill the base through the lid & ring with clean, fresh water, ensuring it covers the water pump adequately.

## Step 6: Powering the system

**6.1** Insert the timer into an electric outlet and switch it on. Plug the water pump into the timer.

**Note:** Please refer to the enclosed pamphlet for instructions on how to programme the timer according to your specific needs.

**6.2** Check that the water is circulating properly through the system.



**For more product information, contact us at:**

**+27 (0) 18 469 1201**

**info@atlasplastics.co.za**

**www.atlasplastics.co.za/hydotower**